

 
Ethernet Sharing Manual

0. Revision History

[illegible]

Network

1 . Network Setup

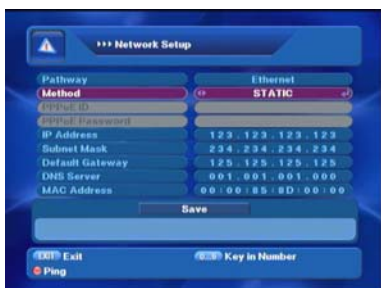

Static

Static IP address can be used by enter the reserved IP address.



EXIT : Exit
RED Key : Ping



DHCP

DHCP(Dynamic Host Configuration Protocol) IP address and all the basic TCP/IP protocol are setting in the STB.



EXIT : Exit
RED Key : Ping
YELLOW Key : Value(+)
Blue Key : Value(-)



PPPoE

It is one to one Ethernet communication protocol and it also can be controlled by ID and PW.



EXIT : Exit
RED Key : Ping
GREEN Key : Edit



Ping

Verify the status of network connection by the link to the server.

Network

2 . Server Setup

You must register server before connect to server



1 . Server Number

Choose one empty Server Number

2 . Server Connection

If you want to connect to server, select "ON", otherwise, select "NO"

3 . Protocol

Choose right protocol

4 . Mode

If you know Server IP, then, choose "Server IP"

If you know Server URL, then, choose "URL"

5 . Server IP / URL


Key in Server IP, or Edit Server URL

6 . User ID

Edit User ID

7 . Password

Edit Password

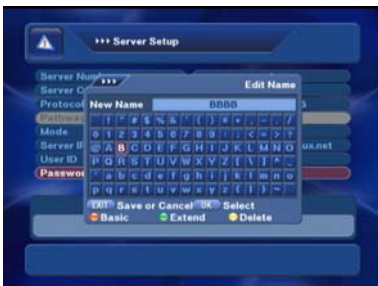

8 . Des Key

Key in Des key

9 . Server Port From

Key in Starting Sever Port Number


10. Server Port To

Key in Ending Server Port Number



Network

Server Setup

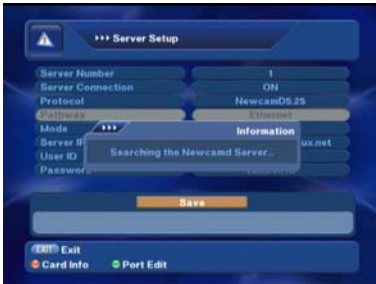

11. Then, press “Save”



12. You can see Server Information



Red key (Port update) - Update information of one port.
Green key (All port update) - Update information of all port.

3 . Software Upgrade



To Software upgrade, enter the server IP address which is defined by the Service Operator.

Then STB software can be upgrade correctly.